


1-2.Opening, closing and locking the doors

Wireless remote control

The wireless remote control can be used to lock and unlock the vehicle from outside the vehicle.

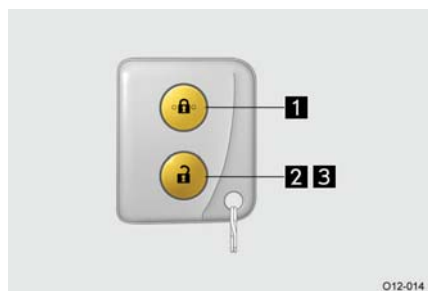

1 Locks both side doors

2 Unlocks both side doors

Pressing the button unlocks the driver's door. Pressing the button again within 3 seconds unlocks the other door.

3 Opens the windows (press and hold)*

*: This setting must be customized at your Lexus dealer.

n Operation signals

The emergency flashers flash to indicate that the doors have been locked/unlocked. (Locked: Once; Unlocked: Twice)

n Alarm

Using the key or wireless remote control to lock the doors will set the alarm system.

n Wireless remote control battery depletion

If the wireless remote control function does not operate, the battery may be depleted. Replace the battery when necessary. (→P. 285)

n Security feature

If a door is not opened within approximately 60 seconds after the vehicle is unlocked, the anti-theft system automatically locks the vehicle again.

n **Conditions affecting operation**

In the following situations, the wireless remote control may not operate properly:

- 1 Near a TV tower, electric power plant, broadcasting station, airport or other facility that generates strong radio waves or electrical noise, an audio or other radio wave emitting device or a large display
- 1 When carrying a portable radio, cellular phone, cordless phone or other wireless communication device
- 1 When multiple wireless remote controls are in the vicinity
- 1 When the wireless remote control is in contact with, or is covered by certain metallic objects
- 1 When another wireless remote control (that emits radio waves) is being used nearby

n **When riding in an aircraft**

When bringing a wireless remote control function onto an aircraft, make sure you do not press any buttons on the wireless remote control while inside the aircraft cabin. If you are carrying the wireless remote control in your bag etc, ensure that the buttons are not likely to be pressed accidentally. Pressing a button may cause the wireless remote control to emit radio waves that could interfere with the operation of the aircraft.

n **Customization that can be configured at your Lexus dealer**

Settings (e.g. door unlocking function and door lock buzzer sound) can be changed. (Customizable features →P. 383)

1-2. Opening, closing and locking the doors

n Certification for wireless remote control

► For vehicles sold in the U.S.A.

FCC ID: HYQ12BDH

FCC ID: HYQ13BDC

NOTE:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC WARNING:

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

► For vehicles sold in Canada

NOTE:

Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.


1-2. Opening, closing and locking the doors

Doors

The vehicle can be locked and unlocked using the key, wireless remote control or door lock switch.

n Key

Turning the key operates the doors as follows:

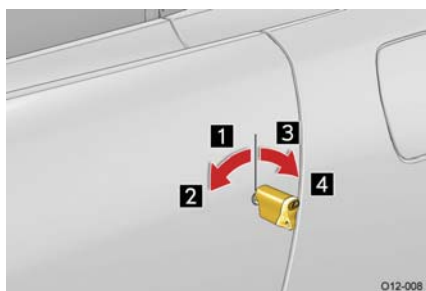

- 1 Locks both side doors
- 2 Closes the windows (turn and hold)*
- 3 Unlocks both side doors
- 4 Opens the windows (turn and hold)*

Turning the key unlocks the driver's door. Turning the key again unlocks the other door.


- 4 Opens the windows (turn and hold)*

*: This setting must be customized at your Lexus dealer.

n Wireless remote control

→P. 22

n Door lock switch

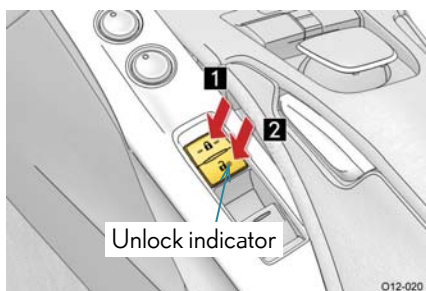

- 1 Locks both side doors
 - 2 Unlocks both side doors
- Pulling on the inside door lever will open the door even when the door is locked.
- The unlock indicator will come on when the doors are unlocked.

Automatic door locking and unlocking systems


The following functions can be set or canceled:



Function	Operation
Speed linked door locking function	Both side doors are locked when the vehicle speed is approximately 12 mph (20 km/h) or higher.
Driver's door linked door unlocking function	Both side doors are unlocked when the driver's door is opened within 10 seconds after turning the ignition switch to the "LOCK" position.

n Setting and canceling the function

To switch between setting and canceling, follow the procedure below:

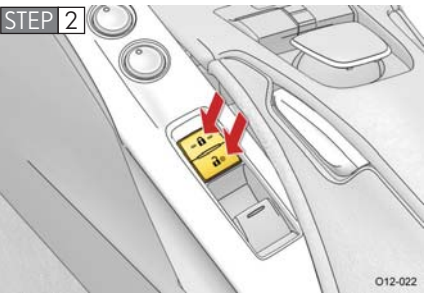

STEP 1 Close both side doors and turn the ignition switch to the "ON" position. (Perform step 2 within 20 seconds.)



Check that Neutral is selected (→P. 103), press and hold the door lock switch ( or ) for about 5 seconds then release.

The switch positions corresponding to the desired function to be set are shown in the following table.

Use the same procedure to cancel the function.

Setting	Door lock switch position
Speed linked door locking function	Press 
Driver's door linked door unlocking function	Press 

When the setting or canceling operation is complete, both side doors are locked and then unlocked.

n Door unlock indicator

This indicator turns off when the doors are locked or 30 seconds after the ignition switch is turned to the "LOCK" position.

n Impact detection door lock release system

In the event that the vehicle is subject to a strong impact, both side doors are unlocked. Depending on the force of the impact or the type of accident, however, the system may not operate.

n If a wrong key is used

The key cylinder rotates freely to isolate the inside mechanism if a wrong key is inserted into the key cylinder and forcibly rotated.

n Customization that can be configured at your Lexus dealer

Settings (e.g. unlocking function using a key) can be changed.
(Customizable features →P. 383)

⚠ CAUTION

n To prevent an accident

Observe the following precautions while driving the vehicle.

Failing to do so may result in a door opening and an occupant falling out, resulting in death or serious injury.

1 Always use a seat belt.

1 Always lock both side doors.

1 Ensure that both side doors are properly closed.

1 Do not pull the lever of the doors while driving.

The doors may be opened and the passengers are thrown out of the vehicle and it may result in serious injury or death.

Be especially careful for both side doors, as the doors may be opened even if the door lock switch is locked.


n When opening or closing the doors

Be careful not to get your fingers or nails caught between the door handle and door panel.

1-2. Opening, closing and locking the doors

NOTICE

■ When entering or exiting your vehicle

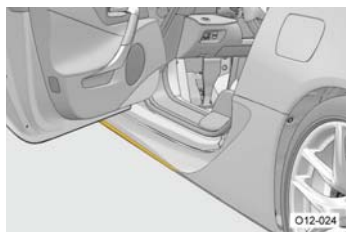

Be careful not to kick or step on the vehicle body as doing so may cause damage to the vehicle and its coating.

Be especially careful with the rocker molding when entering or exiting the vehicle, as it may be easily hit.

1-2. Opening, closing and locking the doors

Rear hatch

The rear hatch can be opened using the rear hatch opener switch.




Press the opener switch.


1

Before driving

n If the rear hatch opener switch is inoperable

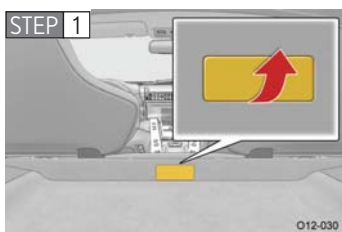


Remove the cover.

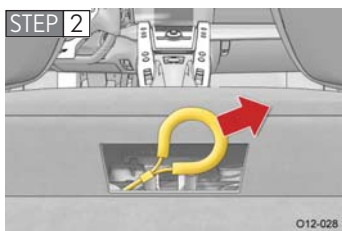

Pull the cable.

n Internal rear hatch release lever

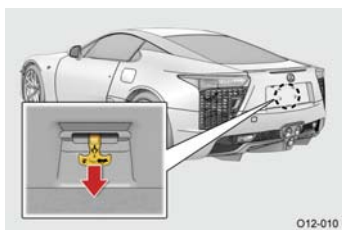

The rear hatch can be opened by pulling on the glow-in-the-dark lever located on the inside of the luggage compartment.

The lever will continue to glow for some time after the rear hatch is closed.

CAUTION

n Caution while driving

- 1 Keep the rear hatch closed while driving.

If the rear hatch is left open, it may hit near-by objects while driving or luggage may be unexpectedly thrown out, causing an accident.

In addition, exhaust gases may enter the vehicle, causing death or a serious health hazard. Make sure to close the rear hatch before driving.

- 1 Before driving the vehicle, make sure that the rear hatch is fully closed. If the rear hatch is not fully closed, it may open unexpectedly while driving, causing an accident.
- 1 Never let anyone sit in the luggage compartment. In the event of sudden braking or a collision, they are susceptible to death or serious injury.

n When children are in the vehicle

Observe the following precautions.

Failure to do so may result in death or serious injury.

- 1 Do not leave children alone in the luggage compartment.

If a child is accidentally locked in the luggage compartment, they could have heat exhaustion.

- 1 Do not allow a child to open or close the rear hatch.

Doing so may cause the rear hatch to operate unexpectedly, or cause the child's hands, head, or neck to be caught by the closing rear hatch.

! CAUTION

n Using the luggage compartment

Observe the following precautions.

Failure to do so may cause parts of the body to be caught, resulting in serious injury.

- 1 Remove any heavy loads, such as snow and ice, from the rear hatch before opening it. Failure to do so may cause the rear hatch to fall closed again after it is opened.
- 1 When opening or closing the rear hatch, thoroughly check to make sure the surrounding area is safe.
- 1 If anyone is in the vicinity, make sure they are safe and let them know that the rear hatch is about to open or close.
- 1 Use caution when opening or closing the rear hatch in windy weather as it may move abruptly in strong wind.



- 1 The rear hatch may fall if it is not opened fully. It is more difficult to open or close the rear hatch on an incline than on a level surface, so beware of the rear hatch unexpectedly opening or closing by itself. Make sure that the rear hatch is fully open and secure before using the luggage compartment.



- 1 When closing the rear hatch, take extra care to prevent your fingers etc. from being caught.
- 1 When closing the rear hatch, make sure to press it lightly on its outer surface.

- 1 Do not attach any accessories to the rear hatch. Such additional weight on the rear hatch may cause the rear hatch to fall closed again after it is opened.